PN: TBD
MODEL: FP-15
SIZE: 265x112x298MM ID
272x118x306MM OD
VOLUME: 0.010 CU.FT
MATERIAL: E FLUTE,7.4KG/CM2
REVISION: 0 DATE: Sep 04,06

801
113
269
115
269
100
114
303
539
100
70
57
57
128
57
70
129

FINAL R.1
12/04/06

Model #: FP15

Start Date: 00/00/05
RT.2 Finish Date: 00/00/05

Project Description:
Package Artwork

Specifications:
Part #: 000-00000-000
Size:
000 x 000 x 000 MM ID
000 x 000 x 000 MM OD
Volume: 0.00 CU.FT.

Creative:
Ken Trox
508-490-7166

Approval Signatures:

	Approved With Changes	See New Proof	Approved
Marketing Director			
Product Manager			
Engineer			
Consumer Relations			
Quality / Safety			
Creative			

Colors:
Dieline (Do Not Print)
CMYK

FORWARD

FD Job#: 12047
File Name: FP15.ai
UPC Code: 0 00000 00000 0

STINGER
OUTDOOR
INSECT KILLER

Attracts and Kills Flying Insects

Stinger Insect Killers can attract and kill many annoying flying insects. This results in a more pleasant outdoor environment for you and your family.

STINGER
OUTDOOR
NEW! INSECT KILLER

Effective coverage up to
1/2 ACRE
For small sized yards
Attracts flying insects

3000 Volts

50% more grid area
Flat Grid Design

Enjoy your yard
- *Proven effective against a wide range of insects*
- *Continuous zapping power*

Easy to use
- *Clean, non-clog grid design*
- *No tanks, bags or mess*

INCLUDED INSIDE
NOSQUITO by STINGER
*Mosquito Octenol Lure**
- *Lures mosquitos*
- *Easy to use*
- *Slow release—lasts 30 days*

*Contains 1 NOsquito by Stinger Mosquito Attractant. See back panel for active ingredients statements.

On Left Side

Attracts and Kills Flying Insects

Model FP15
3 Year Warranty

STINGER
OUTDOOR
INSECT KILLER

Attracts and Kills Flying Insects

Stinger Insect Killers can attract and kill many annoying flying insects. This results in a more pleasant outdoor environment for you and your family.

STINGER
OUTDOOR
NEW! INSECT KILLER

Effective coverage up to
1/2 ACRE
For small sized yards
Attracts flying insects

3000 Volts

50% more grid area
Flat Grid Design

STINGER Outdoor Insect Killer

Attracts and kills flying insects

Stinger Insect Killers can attract and kill many annoying flying insects. This results in a more pleasant outdoor environment for you and your family.

How it works

A 15 watt ultraviolet light excites insects and lures them into the electric grid, where they are electrocuted and fall harmlessly to the ground.

1. Proven effective **UV light** lures light-sensitive flying insects

2. Included **NOsquito octenol lure** acts as a special additional attractant for mosquitos and biting flies

3. Insects are lured into powerful electric grid where they are killed. This flat panel grid design increase kill area by 50% and reduced clogging.

4. Dead insects fall through the **open base** to the ground

Outer enclosure prevents children, pets, birds and wildlife from contacting the electric grid.

Made from durable, weather proof plastic for years of dependable service.

Easy access bulb.

The NOsquito octenol lure* helps attract mosquitos and biting flies

For best results

Since light-sensitive insects are attracted to the Stinger Insect Killer, this product should not be attached to the home, on a deck or near human activity. Position the unit 25' away so insects will be lured away from you.

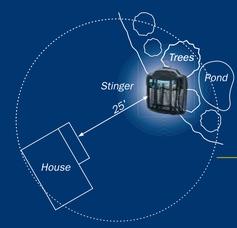

Questions or comments?
We are dedicated to your satisfaction and offer a full line of accessories to make the Stinger Insect Killer more convenient and efficient. Please visit our website at www.kaz.com or call Consumer Service at 1-800-477-0457 for more information, questions or comments.

Model FP15
©2006 Kaz, Incorporated
Hudson, NY 12534
www.kaz.com
info@StingerProducts.com
Stinger and NOsquito are Trademarks of Kaz, Inc.
For Outdoor Residential Use Only.
Made in China.
EPA Est. No. 072336-CHN-001

NOSQUITO by STINGER Mosquito Attractant

Active Ingredient:	
1-Octen-3-ol*	6.3%
Other Ingredients:	93.7%
Total:	100%

*Contains 1660 grams Octenol per lure.
Net Contents: 0.93 oz (26.35 g). Contains 1 lure.

KEEP OUT OF REACH OF CHILDREN
CAUTION
See insert label for additional Precautionary Statements and Directions for Use.

EPA Reg. No 8730-62-44640 EPA Est. No. 72336-NY-001

Lamp Contains Mercury. Dispose of Properly

c UL us

Stinger Outdoor Insect Killer
0 42578 90046 7

Model FP15
EPA Est. No. 072336-CHN-001
Kaz Inc. One Vapor Trail. Hudson, NY 12534
www.kaz.com
© 2006 All Rights Reserved
P/N 32GBFP15B00

STINGER®

OWNER'S MANUAL
ELECTRONIC INSECT KILLER
FP15 Series

MANUAL DE USUARIO
MATAINSECTOS ELÉCTRICO
Serie FP15

Kaz, Incorporated
411 Route 9, Hudson, NY 12534
Consumer Service 800-477-0457 • Fax 518-828-2015
or visit us online at www.kaz.com

Servicio al Consumidor 800-477-0457 • Fax 518-828-2015
o visítenos en línea en www.kaz.com

EPA EST NO. 072336-CHN-001

PRODUCT SPECIFICATIONS

Model	FP15
Acreage	Up to 1/2 acre
Unit Wattage	35
Unit Voltage	120
Unit Amps	0.3
Replacement Bulb Model	B1515
Bulb Wattage	15
Grid Voltage	3000

3 YEAR LIMITED WARRANTY

This Electronic Insect Control Device is warranted against defective material or workmanship for a period of three years from the date of purchase. Any defective part will be, at the discretion of Kaz, repaired or replaced at no charge if the appliance has not been tampered with and has been used according to these printed directions. The consumer is responsible for charges incurred for shipping the defective unit to Kaz for repair/replacement. Retain your receipt to prove warranty. This warranty gives you specific legal rights as well as other rights that vary from state to state.

If you experience unsatisfactory operation, first refer to the "Troubleshooting" section of this manual and follow those suggestions. If Troubleshooting doesn't work, please contact Kaz for repair instructions.

If you have questions of comments, please call Kaz at 800-447-0457 or email consumerrelations@kaz.com

ACCESSORIES

PART	DESCRIPTION
B1515	15 Watt Replacement bulb for UV15
NS16	NOsquito Mosquito Lure

Kaz also manufactures other devices made for indoor and outdoor pest and insect control. Please visit www.kaz.com or call consumer relations for more information about these devices.

TO ORDER ACCESSORIES:

Telephone: Call 800-477-0457 with your Visa, MasterCard or Discover.

Online: Visit www.kaz.com with your Visa, MasterCard or Discover.

Fax: 508-481-0509. Include part number, quantity, shipping information, telephone number, Visa, MasterCard or Discover number, expiration date, and name on the card.

Mail: Send check or money order to: **Kaz Home Environment**
Consumer Relations Dept
250 Turnpike Road, Southborough, MA 01772

Include $4.95 for shipping and handling. Add applicable taxes in MA, NY and TN

Orders are generally received 7-10 days after being placed. Please allow 2-6 weeks for mailed in orders.

© 2006 All Rights Reserved

Kaz, Incorporated • 250 Turnpike Road, Southborough, MA 01772 • 800-447-0457 • www.kaz.com

PRODUCT SPECIFICATIONS

Modelo	FP15
Superficie cubierta por el aparato	hasta 0,2 ha (1/2 acre)
Potencia del aparato (vatios)	35
Tensión del aparato (voltios)	120
Amperaje del aparato	0.3
Modelo de bombillas de recambio	B1515
Potencia de las bombillas (vatios)	15
Tensión de las rejillas (voltios)	3.000

GARANTÍA LIMITADA DE 3 AÑOS

Este dispositivo eléctrico de lucha contra los insectos queda garantizado contra todo defecto de fábrica o de mano de obra durante tres años a partir de la fecha de compra. Kaz se reserva el derecho de reparar o sustituir sin cargo alguno todas las piezas defectuosas siempre que el aparato no haya sido dañado y que haya sido utilizado de acuerdo con las presentes instrucciones. La garantía no cubre los gastos de envío a Kaz del aparato defectuoso que debe ser reparado o reemplazado. Guarde la factura de compra como prueba de la garantía. Esta garantía le confiere unos derechos específicos, reconocidos por la ley. Dichos derechos difieren de un lugar a otro y es posible que usted tenga otros.

En caso de funcionamiento insatisfactorio, consulte primero la sección "Problemas" del presente manual y siga los pasos indicados. Si no funciona, póngase en contacto con Kaz para obtener instrucciones de reparación.

Para cualquier pregunta u observación llame a Kaz, al 1 800 447-0457, o escriba un correo electrónico a consumerrelations@kaz.com

ACCESORIOS

PIEZA	DESCRIPCIÓN
B1515	Bombilla de recambio de 15 vatios para UV15
NS16	Atrayente de insectos NOsquito

Kaz fabrica otros dispositivos específicos para la lucha contra los insectos y plagas tanto en el interior como en el exterior. Visite nuestro sitio Web a www.kaz.com o comunique con el Servicio de atención al cliente para información adicional sobre dichos dispositivos.

PARA PEDIR ACCESORIOS:

Por teléfono: 1 800 477-0457, tenga a mano la tarjeta Visa, MasterCard o Discover.

Por Internet: www.kaz.com, tenga a mano la tarjeta Visa, MasterCard o Discover

Por fax: 508-481-0509. Indique el modelo de la pieza, la cantidad que desee, su dirección para el envío, su teléfono, el número de tarjeta Visa, MasterCard o Discover, la fecha de expiración de la tarjeta y el nombre del titular.

Por correo: envíe un cheque o giro postal a: **Kaz Home Environment**
Consumer Relations Dept
250 Turnpike Road, Southborough, MA 01772

Adjunte 4,95 $ por los gastos de envío y de manutención. Sume las tasas aplicables en Maine, Nueva York y Tennessee.

Una vez efectuado el pedido, calcule entre 7 y 10 días antes de recibirlo, y entre 2 y 6 semanas para los envíos postales.

© 2006 Todos los derechos reservados

Kaz, Incorporated • 250 Turnpike Road, Southborough, MA 01772 • 800-447-0457 • www.kaz.com

P/N: 31IMFP15190

IMPORTANT SAFETY INSTRUCTIONS

Please read these instruction before using the Stinger Electronic Insect Killer and keep for future reference.

1. This product is equipped with a 2-prong plug to fit the proper type receptacles. To reduce the risk of electrical shock, only plug into a properly installed outlet.
2. Do not insert fingers or any foreign objects into the unit while it is connected to an electrical outlet.
3. Collected insects within the unit may contribute to fire so clean dead insects from the unit frequently.
4. Do not clean this product with water spray or any other liquids. Do not place where it can fall into water, or near flammable materials.
5. Store product indoors when not in use – out of reach of children.
6. Always disconnect plug before servicing, cleaning, changing bulbs and when not in use.
7. Do not abuse cord – never carry unit by cord or unplug unit by pulling on the cord - only unplug by pulling on the plug. Keep cord away from heat, oil, or sharp edges.
8. Extension cords used with this product must be marked with suffix letters "W-A" and with a tag stating "Suitable for Use with Outdoor Appliances".
9. Use only extension cords that have plug and receptacles that match the product plug.
10. Electrical rating of the extension cord must be as great as the electrical rating of the product.
11. There are devices available for retaining a connection between an extension cord and a power supply cord. Connections should be kept off the ground and dry.
12. Do not mount the unit on house, other buildings, on decks or near heat, gas, oil or other flammable materials.
13. For outdoor residential use only.

IMPORTANT INFORMATION ABOUT INSECT CONTROL

The Stinger® Electric Insect Killer is designed to lure and kill a wide range of flying insects. The ultraviolet (UV) light given off by this unit is within the luminescent range proven effective to lure these insects. Insects are lured to the light and killed as they contact the electrically charged inner grid area. Insects fall through the open base onto the ground. The outer protective cage helps prevent pets, birds, butterflies, and children's fingers from contacting the charged grids. The unit is for outdoor use only and can withstand moderate rain. For best results, the unit should be installed in early spring and left on continuously through the season.

IMPORTANTES INSTRUCCIONES DE SEGURIDAD

Por favor, lea las presentes instrucciones antes de usar el matainsectos eléctrico de Stinger y consérvelas para consultarlas posteriormente.

1. Este producto viene con un enchufe de dos patillas que entra perfectamente en las tomas de corriente apropiadas. Para disminuir el riesgo de choque eléctrico, enchufe únicamente a una toma instalada correctamente.
2. No meta los dedos ni ningún cuerpo extraño en el aparato cuando esté enchufado a una toma de corriente.
3. Los insectos que recoja el aparato pueden provocar un incendio: hay que retirar los insectos muertos del aparato con frecuencia.
4. No limpie este aparato con un vaporizador de agua ni con ningún otro líquido. No coloque el aparato en un lugar donde pueda caer al agua ni junto a materiales inflamables.
5. Cuando no vaya a usar el aparato, guárdelo en el interior, lejos del alcance de los niños.
6. Desenchufe siempre el aparato antes llevar a cabo su mantenimiento, limpiarlo, cambiar la bombilla y cuando no vaya a usarlo.
7. No use el cable de alimentación de forma improcedente: nunca desplace el aparato mediante el cable ni lo desenchufe tirando del mismo; desenchúfelo únicamente tirando del enchufe. Coloque el cable lejos del calor, el aceite y cualquier filo cortante.
8. Los cables de extensión que use con este aparato deben llevar marcadas las letras « W-A » y una etiqueta que indique que pueden usarse con aparatos para el exterior.
9. Use únicamente cables de extensión con enchufe y tomas adaptadas al enchufe de este aparato.
10. Las características eléctricas del cable de extensión deben ser tan altas como las del aparato.
11. Existen dispositivos que permiten mantener la conexión entre un cable de extensión y el cable del aparato. La conexión no debe tocar el suelo y debe poder mantenerse seca.
12. No suba el aparato sobre una casa ni ningún otro edificio, ni sobre las terrazas ni cerca de ninguna fuente de calor, gasolina, aceite ni ningún material inflamable.
13. Para uso residencial en el exterior únicamente.

INFORMACIONES IMPORTANTES SOBRE EL CONTROL DE INSECTOS

El matainsectos eléctrico de Stinger® está diseñado para atraer y matar gran variedad de insectos voladores. La luz ultravioleta (UV) que emite el aparato está dentro de la gama luminosa probada para atraer dichos insectos. Los insectos son atraídos hacia la luz y mueren en cuanto entran en la zona de las rejillas internas cargadas eléctricamente. Los insectos caen al suelo por la base abierta. La caja protectora externa sirve para impedir que animales domésticos, pájaros, mariposas y dedos de niños toquen las rejillas cargadas. El aparato está diseñado para uso exterior únicamente pudiendo resistir a la lluvia de intensidad media. Para un resultado óptimo, debe instalar el aparato al principio de la primavera y dejarlo funcionar continuamente toda la temporada.

CHOOSING A LOCATION

When selecting a location, you want to remember the insects will be lured to the unit so do not put the unit near human activity. Choose a location about 25 feet away from the area you are trying to protect. If there is a water source nearby, place the unit between you and the water because water is a breeding ground for most flying insect pests. The FP15 is designed to cover up to 1/2 acre. (Fig. 1)

INSTALLATION/OPERATION

1. Unpack unit, save all packaging material for off-season storage.
2. Select the proper location to hang your unit using the information above.
3. Hang the unit approximately 7 feet above the ground from a tree, mounting pole or other free standing object. Never mount the unit from house or other building.
4. Plug cord into a compatible extension cord rated for outdoor use.
5. The unit will be on once it is connected to an electrical source. This unit does not have an "on/off" switch. Please allow up to 5 minutes for the bulb to light completely.
6. This unit is designed to withstand moderate rains but should be taken down and stored indoors during severe weather.
7. It is recommended that this unit be put into use in early spring and left out until late fall to maximize effects.
8. Using the available lures (see "accessories") will add to the effectiveness of the unit by adding a chemical scent to attract more insects to the unit.

INSTALLING THE NOSQUITO OCTENOL LURE

You will find a free NOsquito™ octenol lure (NS16) included with this Stinger Insect Killer. Use only NOsquito by Stinger lures. Research has shown that octenol is effective in attracting many species of mosquitoes and biting flies. This lure has slow release properties and increases the effectiveness of luring mosquitoes to the unit. For best results, replace every 30 days. (Fig. 2)

1. Open the lure by either removing from pouch or peeling off the foil lid.
2. The FP15 has a specially designed lure holder built into the left upper side of the unit. Open the small door with a finger nail or flat screwdriver and simply push the lure into this holder. The lure should fit snuggly and the tension tabs should hold it tightly in place. Shut the door until it securely snaps in place.
3. To remove – pull out the lure and discard appropriately in a trash receptacle.

CHANGING BULBS

Only use Stinger® replacement bulbs. These bulbs should be replaced annually to maintain optimal UV effectiveness. Even though the bulb's light may be visible to you, its ability to attract insects diminishes over time. If the bulb fails to light or the color of the light changes to yellow or orange it is time to replace the bulb. (Fig. 3)

1. Unplug and remove entire unit from hanging position.
2. The FP15 has a specially designed bulb holder built into the right upper side of the unit. Open the small door with a finger nail or flat screwdriver
3. Insert the new bulb making sure it is properly seated in the socket.
4. Shut the door until it securely snaps in place.
5. Place unit back into the hanging position and plug back into the outlet.
6. Note: the bulb in this unit contains Mercury, dispose according to Local, State or Federal Laws.

Note: If unit fails to light after replacing bulb, take unit down and remove the bulb and reseat it in the socket.

CLEANING

As the unit kills insects, most of the insect remains will be vaporized or fall down through the unit. Some remains will be left on the grids and over time will reduce the effectiveness of this device. Make sure to regularly clean your unit to achieve maximum effectiveness. The time in between each cleaning will vary depending on your insect populations. Check your unit frequently and clean any insect remains you see.

1. Unplug and remove entire unit from hanging position.
2. Remove bulb from unit to avoid damage (see above instructions).
3. Using a small brush or stick, gently remove any insect remains from outer casing and inner grids.
4. If available, you may use compressed air to clean out your unit.
5. Never use water to clean your unit, water could damage the electrical components.
6. Once the unit is clean, replace the bulbs, return the unit to the hanging position and reconnect to power source.

Note: If arcing occurs after cleaning, unplug unit and remove from hanging position. Check the grids and make sure they are not touching in any place. Gently use a stick to bend grids away from each other.

Figure 1

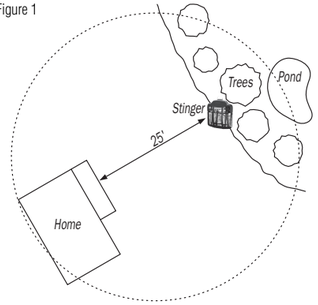

Figure 2

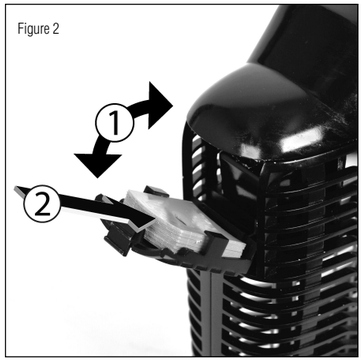

Figure 3

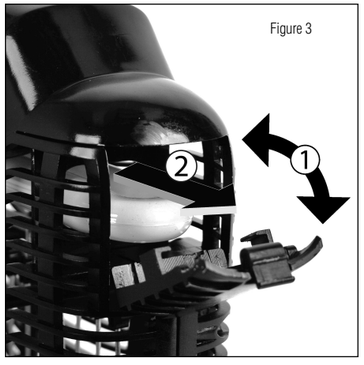

TROUBLESHOOTING

Symptom:	Solution:
Unit will not light, no apparent grid voltage	- Make sure unit is plugged into working outlet.
Unit will not light, grid has voltage	- Check bulb to make sure it is seated properly. - Replace bulb if necessary.
Unit will Light, no apparent grid voltage	- Unplug unit and check grids to make sure they are not touching and seated properly. Adjust as needed.
Unit appears to be working properly but insect populations do not seem reduced	- Check grids and make sure there is voltage. - Check surrounding area for sitting water, insects breed in these areas and should be eliminated from the source. - Allow more time; it will take some time for the insects to find the unit and also for there to be an impact on their reproductive cycles. - Try moving the unit to another area of the yard. If you are in between the unit and the source of the insects, they will have to fly by you to get to the unit and you may actually notice an increase in insects.
Unit is constantly Arcing(sparking)	- Clean unit per the instructions in the "Cleaning" section of this manual. - Check the grids and make sure they are not touching, adjust as needed.

If the above troubleshooting doesn't solve your problems or you have any other questions, please call consumer relations at 800-477-0457 or email consumerrelations@kaz.com

DÓNDE COLOCARLO

A la hora de decidir dónde irá a colocar el aparato, debe recordar que los insectos serán atraídos hacia el aparato. Por lo tanto, no debe colocarlo cerca de los lugares donde haya actividad humana. Escoja un lugar a una distancia de 7 a 8 m (25 pies) de la zona que desee proteger. Si hay agua concentrada a proximidad, coloque el aparato entre usted y el agua pues es un lugar de reproducción para la mayoría de insectos voladores perjudiciales. El FP15 está diseñado para cubrir una superficie de 0,2 ha (1/2 acre). (Illustration 1)

INSTALACIÓN Y FUNCIONAMIENTO

1. Saque el aparato del embalaje y conserve todos los materiales de embalaje para cuando vaya a guardar el aparato al final de la temporada.
2. Escoja el lugar adecuado para colgar el aparato sirviéndose de las informaciones precedentes.
3. Cuelgue el aparato a aproximadamente 2 m (7 pies) del suelo, a un árbol, un poste de montaje o cualquier otro objeto de soporte. Nunca instale el aparato sobre una casa ni ningún otro edificio.
4. Enchufe el cable a un cable de extensión compatible y categorizado para uso exterior.
5. El aparato se pondrá en marcha en cuanto lo enchufe a una fuente eléctrica. Este aparato no posee un interruptor de marcha/parada. La bombilla requiere hasta 5 minutos para prenderse completamente.
6. Este aparato está diseñado para resistir a la lluvia de intensidad media. Sin embrago, debe descolgarlo y guardarlo en el interior en caso de borrasca violenta.
7. Para obtener resultados óptimos, le recomendamos que deje funcionar el aparato desde el comienzo de la primavera hasta el final del otoño.
8. El uso de los atrayentes propuestos (véase la sección Accesorios) aumentará la eficacia del aparato añadiendo un olor químico para atraer a los insectos hacia el aparato.

INSTALACIÓN DEL ATRAYENTE DE OCTENOL NOSQUITO

El matainsectos de Stinger viene con un atrayente de octenol NOsquito™ (NS16) gratis. Utilice únicamente los atrayentes NOsquito de Stinger. Se ha demostrado que el octenol es eficaz para atraer gran número de especies de mosquitos y moscas que pican. Este atrayente tiene propiedades de liberación lenta y aumenta la eficacia del aparato para atraer los insectos. Para resultados óptimos, sustituya el atrayente cada 30 días. (Illustration 2)

1. Abra el atrayente sacándolo de su bolsita o de la película de aluminio.
2. El FP15 posee un soporte de atrayente diseñado especialmente e incorporado en la parte superior izquierda del aparato. Abra la puertecita con la uña o un destornillador plano y coloque simplemente el atrayente en el soporte. El atrayente debe entrar perfectamente y se mantendrá en su sitio gracias a las patillas de tensión. Vuelva a cerrar la puerta asegurándose de encajarla bien.
3. Para retirar: tire del atrayente para sacarlo y, seguidamente, bótelo adecuadamente en un cubo de basura.

PARA CAMBIAR LAS BOMBILLAS

Utilice únicamente las bombillas de recambio Stinger®. Las bombillas deben cambiarse un avez al año para mantener la eficacia máxima de los rayos ultravioleta. Aunque la bombilla siga emitiendo luz, su capacidad para atraer los insectos disminuye con el tiempo. Si la bombilla no se prende o si la luz se vuelve amarilla o naranja, significa que debe cambiar la bombilla. (Illustration 3)

1. Desenchufe el aparato y seguidamente descuélguelo completamente.
2. El FP15 posee un soporte de atrayente diseñado especialmente e incorporado en la parte superior derecha del aparato. Abra la puertecita con la uña o un destornillador plano.
3. Retire la bombilla y coloque la nueva asegurándose de encajarla bien en el casquillo.
4. Cierre la puerta asegurándose de encajarla bien.
5. Vuelva a colgar el aparato y enchúfelo.
6. Nota: la bombilla de este aparato contiene mercurio, deshágase de ella de acuerdo con las leyes locales, provinciales o federales.

Nota: si después de cambiar la bombilla no prende, descuelgue el aparato, retire la bombilla y vuelva a colocarla en el casquillo.

LIMPIEZA

Conforme el aparato vaya matando los insectos, los restos de los mismos se irán desintegrando en su mayoría o cayendo por la base abierta. Sin embargo, ciertos insectos pueden quedar pegados a las rejillas disminuyendo, con el tiempo, la eficacia del aparato. Debe limpiar el aparato con asiduidad para mantener su máxima eficacia. El intervalo de tiempo entre cada limpieza variará según la cantidad de insectos existente. Compruebe el aparato con frecuencia retirando siempre los restos de insectos que tenga.

1. Desenchufe el aparato y seguidamente, descuélguelo.
2. Retire la bombilla del aparato para no dañarla (siguiendo las instrucciones anteriores).
3. Con ayuda de un cepillo o un bastoncillo, retire los restos de insectos de la caja exterior y de las rejillas internas.
4. Puede usar aire comprimido para limpiar el aparato.
5. Nunca use agua para limpiar el aparato, podría dañar los componentes eléctricos.
6. Una vez limpio el aparato, vuelva a colocar la bombilla, cuelgue el aparato y enchúfelo.

Nota: si se producen descargas electroestáticas después de haber limpiado el aparato, desenchúfelo y descuélguelo. Cerciórese que las rejillas no se tocan entre sí. Con un palito, enderece las rejillas con cuidado y aléjelas entre sí.

Ilustración 1

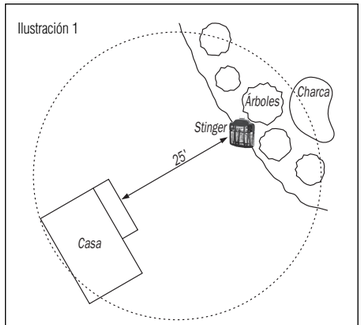

Ilustración 2

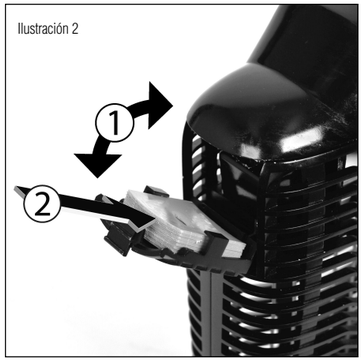

Ilustración 3

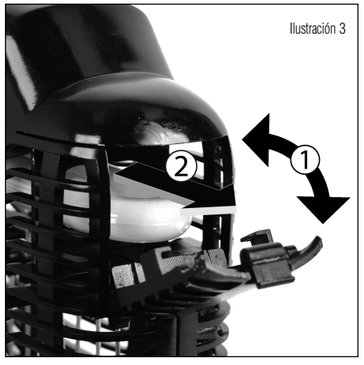

PROBLEMAS

Problema	Solución
El aparato no se prende y no parece haber corriente en las rejillas.	- Asegúrese que la toma de corriente a la que esté enchufado el aparato funcione.
El aparato no se prende, pero hay corriente en las rejillas.	- Compruebe la bombilla y asegúrese que esté bien instalada. - Cambie la bombilla si es necesario.
El aparato se prende, pero no parece haber corriente en las rejillas.	- Desenchufe el aparato y compruebe que las rejillas no se toquen entre sí y que estén bien instaladas. Enderécelas si es necesario.
El aparato parece funcionar bien, pero la cantidad de insectos no parece disminuir.	- Compruebe las rejillas y cerciórese que haya corriente. - Alrededor del aparato no debe haber agua estancada: los insectos se reproducen en esos lugares, debe eliminarlos en su origen. - Espere un poco más: toma cierto tiempo antes que los insectos encuentren el aparato y que éste tenga incidencia en su ciclo de reproducción. - Intente colocar el aparato en otro lugar. Si se encuentra ente el aparato y el lugar de origen de los insectos, tendrán que pasar cerca de usted para llegar al aparato, por lo que podrá observar un aumento del número de los mismos.
El aparato produce continuamente descargas electroestáticas (chispas).	- Limpie el aparato siguiendo las instrucciones de limpieza del presente manual. - Compruebe las rejillas y asegúrese que no se toquen. Enderécelas si es necesario.

Si no resuelve su problema gracias a estos consejos, o para cualquier pregunta, llame al Servicio de atención al cliente al 1 800 477-0457 o envíe un correo electrónico a consumerrelations@kaz.com